



Quick Installation Guide

- ✧ Design for VAP6056B & VAP6156A
- ✧ Supports wall and pole mounting
- ✧ Easy to install, strong and durable


Package Contents




- ① Mounting bracket *1
- ② Metal hoop (diameter: 46-70mm)*2
- ③ Screw (for wall mounting) *4
- ④ Expansion plug (for wall mounting)*4
- ⑤ Screw (for locking device & mounting bracket) *1

Installation step

• Wall mounting

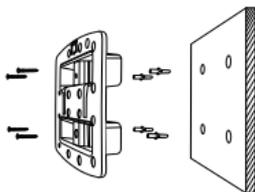


1. Put the mounting bracket to the wall with screws;

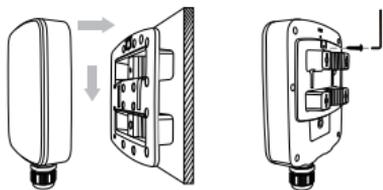


2. Put the device on the mounting bracket and push it down until it connect into position and lock the fixing screw between the device and the mounting bracket.

• Pole mounting

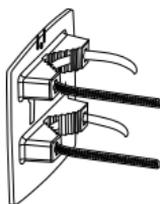


1. Insert the metal hoop into the mounting bracket;

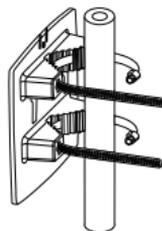

2. The mounting bracket is locked on the pole by a metal hoop;

- Put the device on the mounting bracket and push it down until it connect into position and lock the fixing screw between the device and the mounting bracket.

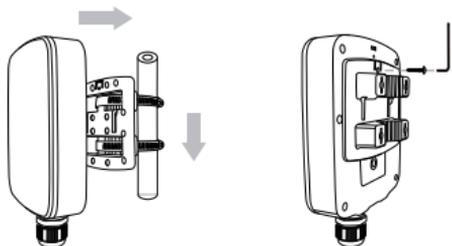

The Initial Configuration of VAP

When the VAP is connected to a DHCP network it will automatically obtain an IP address and discover the AC through broadcast. In general local applications, we do not need to specify the Local AC IP address for the VAP; on the other hand, we can also specify the Local AC/Central AC IP address for the VAP, and in certain environments (AP to AC cross-NAT), we have to specify the Local AC/Central AC IP address for the VAP.

The initial configurations of VAP are as shown below:

- When the VAP is powered up it will by default broadcast the SSID "abloomy_mac", as shown below: `Abloomy_60:cd:a9:00:16:4d`
- Connect your laptop to the SSID and manage the VAP through SSH (use SSH software like Xshell), the management ip is 10.0.0.1, as shown below: `[c:\~]$ ssh 10.0.0.1`
Also access `http://10.0.0.1:9000` from the browser
- Follow the prompts to enter username: `admin` and password: `admin`. After login successfully, type "shell" at the command line and press enter, use the following command to specify the remote Central AC/Local AC IP (for example:192.168.100.21) address for the VAP: `Abloomy> set csip 192.168.100.21`

Have the VAP connected to the network after the completion of the above steps.

Detailed configuration of WLAN, Radio and so on should be configured on the graphical page of Local AC/Central AC.

Online Resources

Please log in `www.abloomy.com` to get the technical documents, or contact our technical engineer by email(`service@abloomy.com.cn`). Before you send it, Please contact our Service to make sure malfunction of devices and warranty period first, Service Tel: `+001-888-690-7008`

We will publish the new products and software on our official website in the first time.